


MOISTURE/PRESSURE VENT

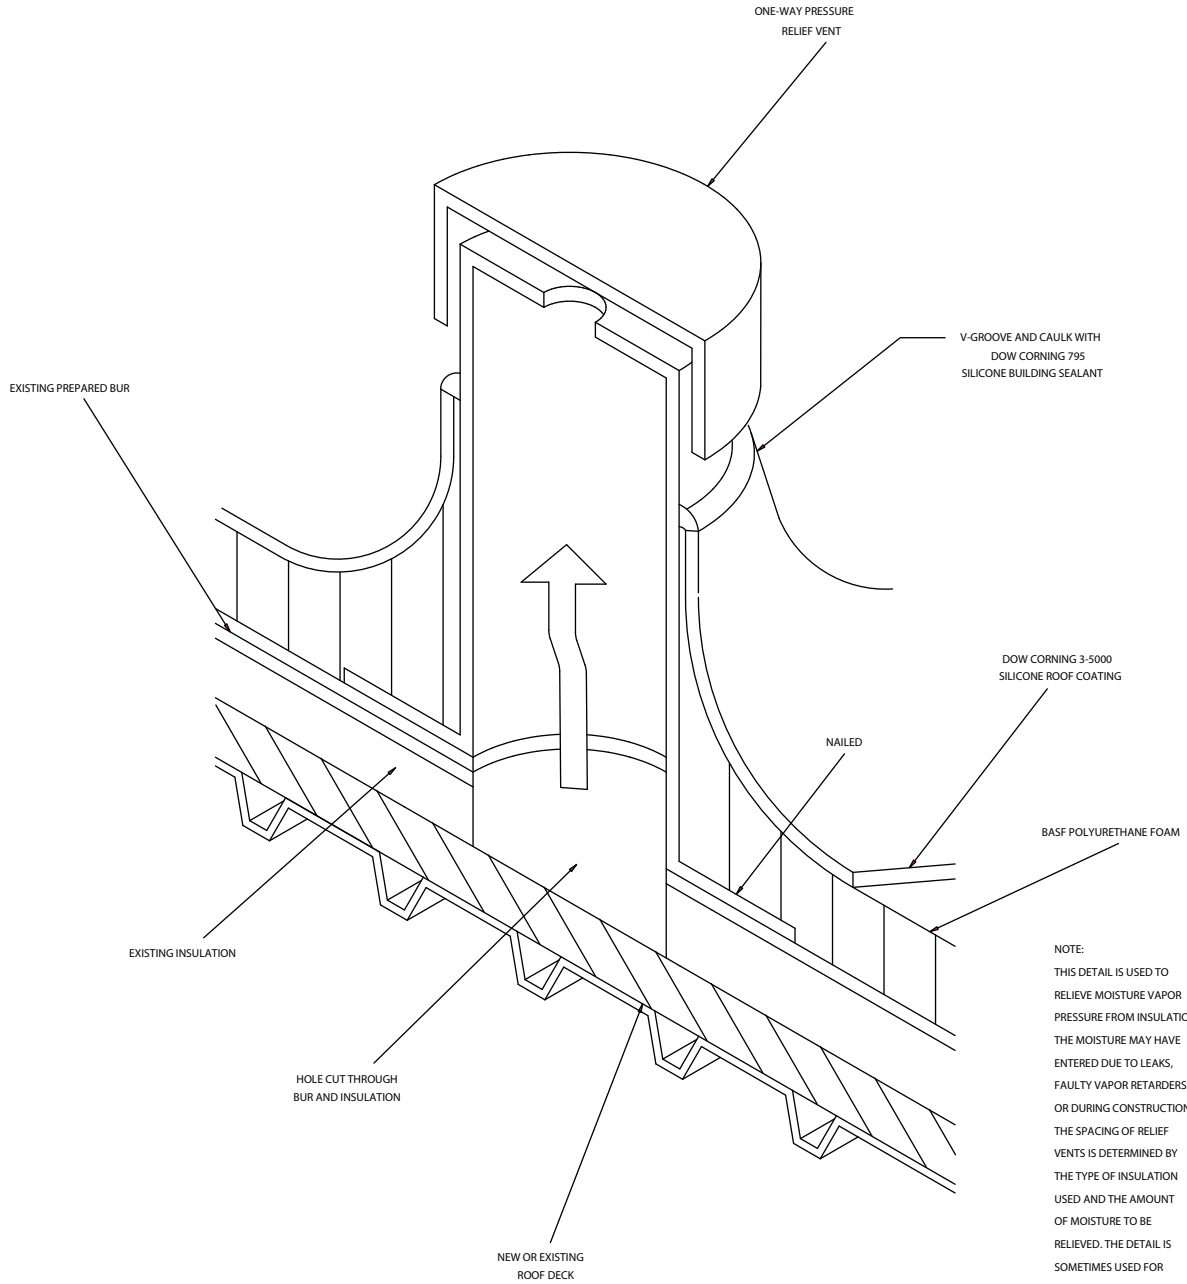

NOTE:  
THIS DETAIL IS USED TO RELIEVE MOISTURE VAPOR PRESSURE FROM INSULATION. THE MOISTURE MAY HAVE ENTERED DUE TO LEAKS, FAULTY VAPOR RETARDERS OR DURING CONSTRUCTION. THE SPACING OF RELIEF VENTS IS DETERMINED BY THE TYPE OF INSULATION USED AND THE AMOUNT OF MOISTURE TO BE RELIEVED. THE DETAIL IS SOMETIMES USED FOR NEW ROOFS WHEN VAPOR RETARDERS ARE USED AND A VENTING SYSTEM IS DESIRED.