


NOTE: IF BLOCKING IS NOT PRESENT AT TIME OF SPRAY FOAM & AIR BARRIER INSTALLATION, WRAP MEMBRANE OVER PARAPET & DOWN WALL 2" & INSTALL FOAM STOP (DASHED). CONNECTION TO TRANSITION STRIP IS BY OTHERS.

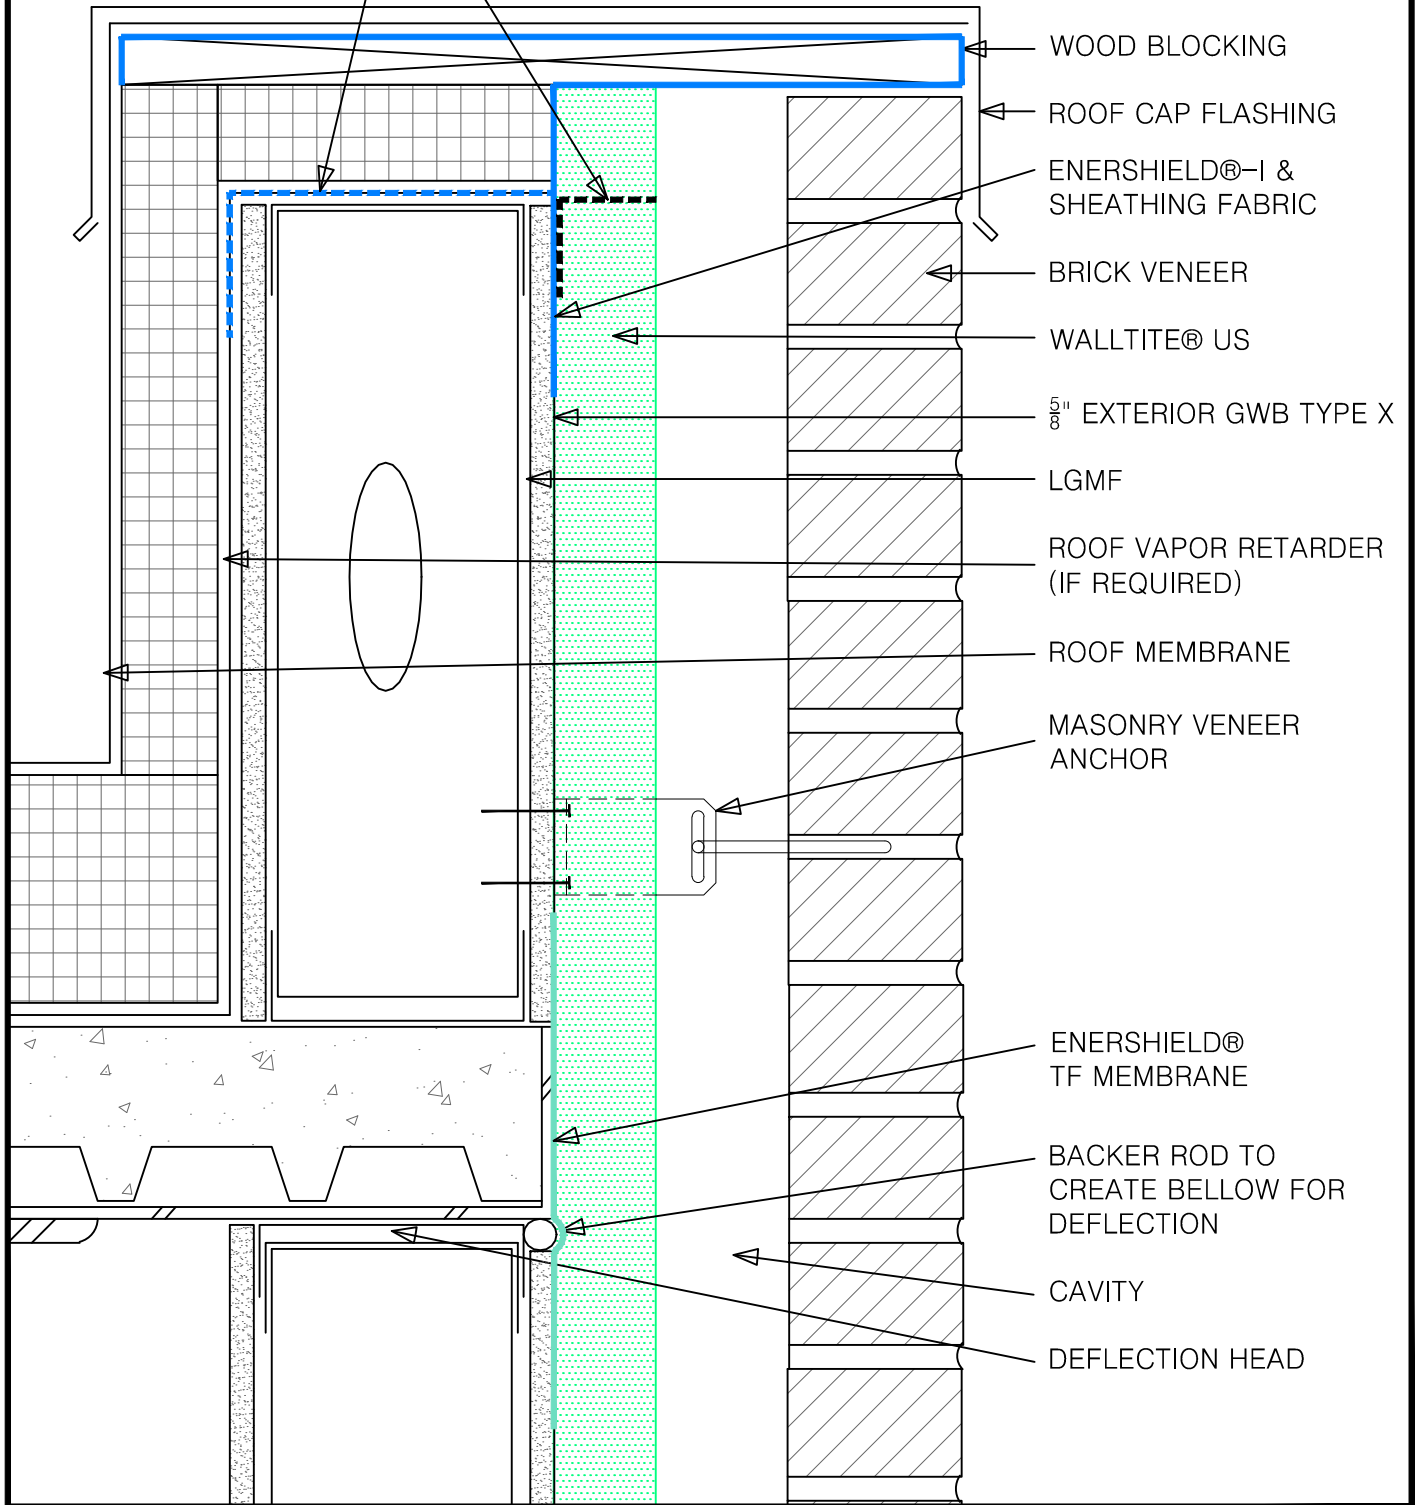

SKETCH: WALLTITE® US
ROOF DETAIL 2
LGMF BU

BASF Corporation
1703 CROSSPOINT AVE, HOUSTON, TX 77054
1-888-900-FOAM
www.spf.basf.com

SKETCH NO:
AB-LGMF-15

DATE: 08/01/2014

DISCLAIMER - BASF Corporation is not liable for any errors or omissions in design, detail structural capability, attachment details, shop drawings or the like, whether based upon the information provided by BASF Corporation or otherwise, or for any changes which the purchasers, specifiers, designers or their appointed representatives may make to BASF Corporation's published comments. DESIGN DETAIL IS FOR REFERENCE ONLY.